



NS

NS-Type-C Series

User Manual



Take you to explore the newest storage fun.

Catalog

I Product overview	3
1.1 The manual of ORICO NS disk station	2
1.2 Notice	2
1.3 Features	2
1.4 What's in the box	3
1.5 About the manual	3
II Usage manual	3
2.1 Appearance	3
2.2 LED indicator	4
2.3 Product parameter	5
2.4 Instructions	5
2.4.1 Installation	6
2.4.2 Connect with computer	6
2.4.3 Uninstall the hard drive	6
III The format and partition of hard drive	7
3.1 Format and partition the hard drive	7
IV Others	11
4.1 Product trouble shooting	11
4.2 Declaration	12

I Product overview

1.1 The manual of ORICO NS disk station

The series of disk stations are ORICO high-end storage products, with aluminum-magnesium alloy body and anodizing surface, a kind of great products with excellent design; Unique magnetic opening type provides you a nice installation experience; Type-C interface with USB3.1 To SATA3.0 program, supporting USB 3.1 Gen1 5Gbps high speed transmission and UASP Acceleration Protocol. ORICO disk station will bring you a different product experience with a new design.

1.2 Notice

To avoid loss of data of your hard drive, reading this manual, trying to use a hard drive that does not have a saved file, so that you can safely familiarize yourself with the use of this product.

1.3 Features


1.3.1 Product Functions

- (1) Type-C interface supports forward and reverse insert.
- (2) Some models have built-in silent cooling fan, strong cooling function.
- (3) Support UASP Acceleration Protocol.
- (4) External high-power power supply to protect the hard drive's stable operation.
- (5) Support hot-swappable, plug and play.

1.3.2 Structural design, appearance characteristics

- (1) Unique magnetic opening type of the front panel, the lid can be closed exactly and easily.
- (2) Many cooling holes in rear panel to meet the metal body heat dissipation.
- (3) Aluminum ridge plus arc chamfer design of the periphery of the product, simple and stable.
- (4) Sandblasted anodized surface , black and white color choices.

1.4 What's in the box



NS Disk Station



power adapter
and Date cable



Data cable



Manual



Thanks card

Due to the need to update the product, the appearance of the product and the packaging or accessories may change, please take the real object you received, thank for your support! If you have any questions, please contact your dealer.

1.5 About the manual

This manual is compatible for the NS products with Type-C interface. The corresponding products are as follow.

Model	NS100C3, NS200C3, NS400C3, NS500C3, NS800C3
-------	---

II Usage manual

2.1 Appearance



① Power Button

④ Front Lid


② Type-C Interface

⑤ Hard Drive Indicator

③ Power Interface

NO.	Name	Instruction
①	Power button	Power switch
②	Type-C Interface	Data transfer interface, the insertion
③	Power Interface	12V power input interface (always use the original power adapter)
④	Front lid	Magnetic opening type
⑤	Hard drive Indicator	The right one is power light, other lights are hard drive light (Note: The NS100C3 has only one LED light)

2.2 Hard drive indicator

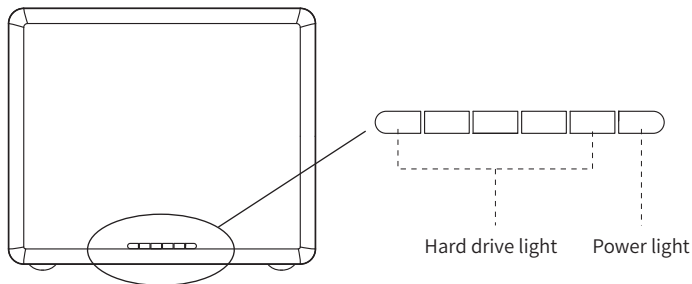

The status of LED indicator	Details
Power	Power light always is blue
Insert hard drive	Hard drive light always is blue; no hard disk, the hard drive light does not shine
Read	The hard drive light blinks blue
Malfunction	The hard drive light always is red
Hibernation	The hard drive light does not shine

2.3 Product parameter

Catalog	Parameter
Series	Products with Type-C interface
Interface	USB3.1 Type-C
Speed	5Gbps / NS100C3 Support 10Gbps (Theoretical value)
Disk supported	3.5 Inch SATA HDD
Indicator	Yes
Installation	Magnetic opening type, tool-free
Texture	Aluminum alloy +ABS
System supported	Windows / Mac OS / Linux

Model	Size
NS100C3	215.5(L)×42(W)×131(H)mm / 8.48×1.65 ×5.16 Inch
NS200C3	223(L)×71(W)×134(H)mm / 8.8×2.8×5.28 Inch
NS400C3	223.5(L)×129(W)×135(H)mm / 8.8×6.3×5.31 Inch
NS500C3	223.5(L)×159.6(W)×136(H)mm / 8.8× 6.28×5.35 Inch
NS800C3	247.6(L)×225(W)×140(H)mm / 9.75× 8.86×5.51 Inch

2.4 Instructions

2.4.1 Hard drive Installation



Step1: Open the disk station, hold the product by hand, and pull out the magnetic lid directly with another hand.



Step2: Put the hard drive into the disk station, use the hard drive to open the shrapnel, insert one end of hard drive with interface into the disk channel.

Note: Insert the hard disk, with the front side of the hard disk (with sticker) to the left.



Step3: Close the lid, the lid will be automatically adsorbed by the disk station for the magnetic opening type.

2.4.2 Connect with computer

After inserting the hard drive, insert the original power adapter into the power port, use the data cable to connect the product data port, and the other end is connected to the computer's USB port.

2.4.3 Remove Devices

(1) Remove it from the Windows system

First, stop the read and write operations of the hard drive, and then click the USB small icon on the taskbar, select the disk drive that is needed to be uninstalled to complete uninstall.



(2) Remove it from MAC


First, stop the read and write operations of the hard drive, and then drag the disk drive to the Recycle Bin to complete the uninstall.

III Initialize and Format New Drives under Microsoft Windows

New drive need to be initialized and formatted or it won't work. Please follow the following direction to initialize and format your drive if you are mounting a new drive.

(1) Please ensure you have mounted drive to ORICO dock properly and attach the orico dock to computer.

(2) Right click on computer, Select "Manage", Open "Disk Management" in "Storage" of opened windows. a popup will come up here suggest a new drive need to be initialized. please select the disks and click ok will get it initialized.

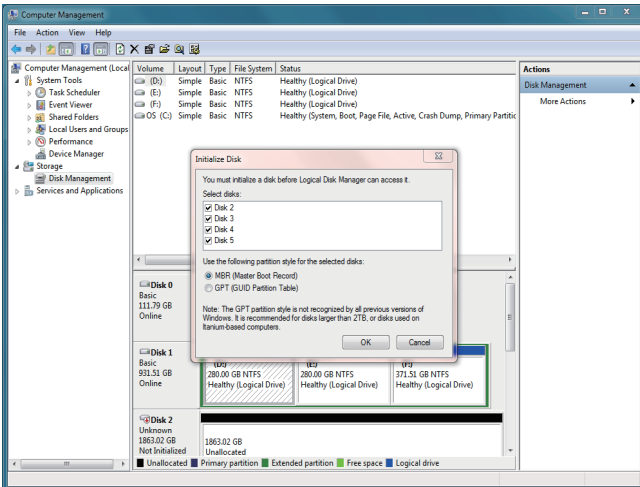


Note:

A. If you are mounting a drive which not larger than 2TB and may using on a windows vista or eariler computer, initialize with partition style MBR is recommended.


B. If you are mount a drive larger than 2TB, initialize with partition style GPT is recommend- ed. or you will get 2TB of the drive applicable and the rest will be unable to initialize.

C. If you closed this windows by mistake or the windows have never come up, right click on the "Disk Number" and select "Initialize Disk" will get the windows come up.


(3) Right click on unallocated new drive, select "New Simple Volume" will start to add new volume and format it.

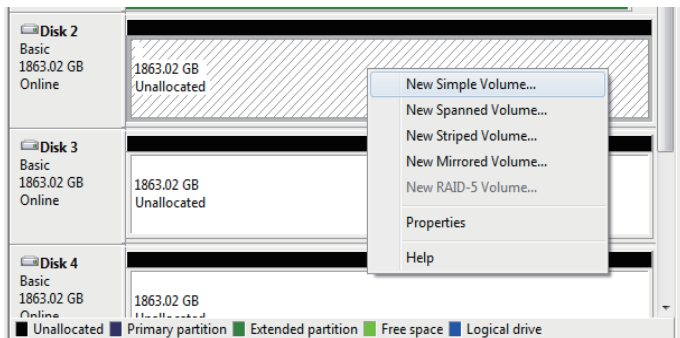


(4) set the volume size of your new volume. You can customize the size your expected. Or you can set the size of the volume at maximum disk space to set the drive to one volume.

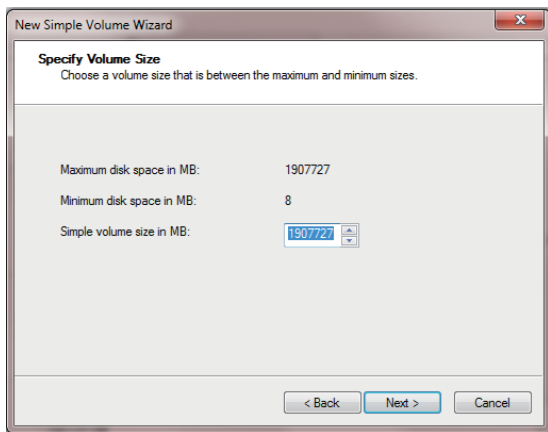


(5) Assign new drive letter for the new volume. drive letter such as C, D, E, F, G will shown in computer and explorer for application.

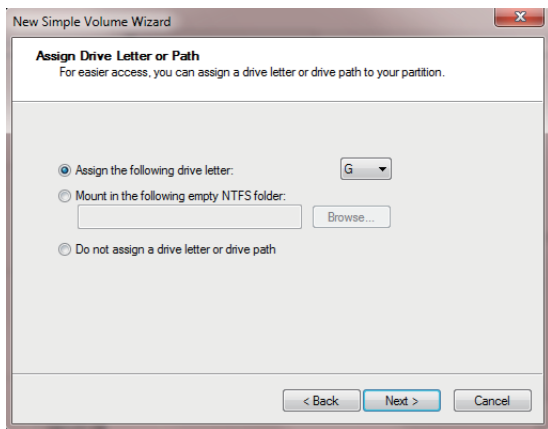


- (6) Format your new volume. You can set the file system (NTFS or FAT32), allocation unit size and volume label here. Perform a quick format is recommended. Please click "Next" when everything is configured.

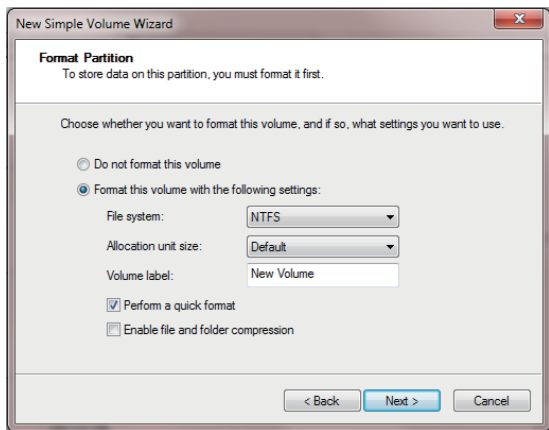

- (7) Click "Finish" will Start to Format the Volume.

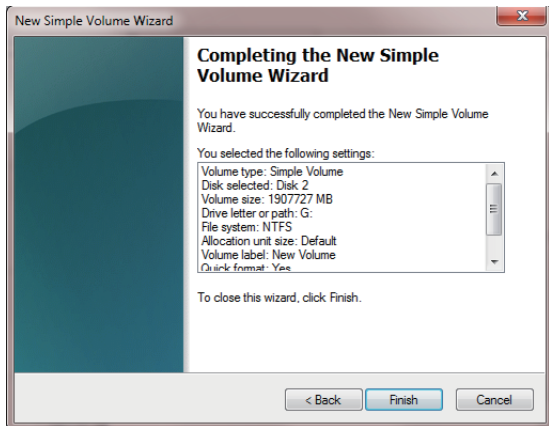

(8) The formatting will take 5 to 30 seconds. When the formatting is done, the new volume will be ready for any application.

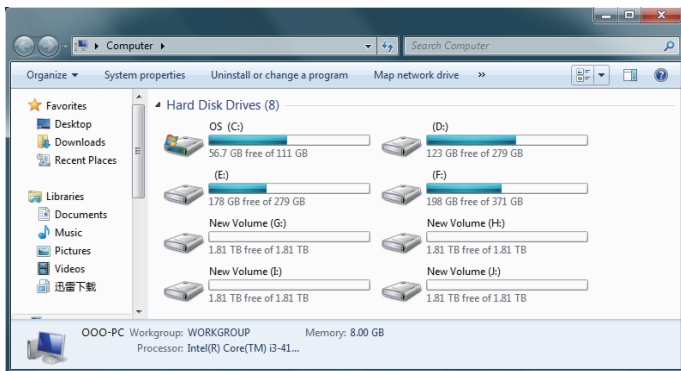

IV Others

4.1 Trouble Shoting:

- (1) Please check if usb hosts of computer are working properly. Attach ORICO device and drive to rear usb hosts is recommended if you are using a desktop computer.
- (2) Mount one drive for test is recommended. please check if the ORICO device will works well when one drive mounted to HDD slot 1.
- (3) Please ensure the cable and power adapter attached properly.
- (4) Please ensure the drive have been formatted properly. Right click on computer, select "Manage", Open "Disk Management" in "Storage" of opened windows will shows any drive mounted to your computer and if they are formatted or not. please follow the direction of "Initialize and Format New Drives under Microsoft Windows" if your are mounting new drives.
- (5) Please test the ORICO device and drive via other USB3.0 or 2.0 hosts or another computer if available.

(6) Please test the ORICO device and drive with other USB3.0 cable or USB2.0 cable for printer if available.

If the issue remains, please contact ORICO customer care center and let us know the detailed info of your drive and computer with a screen shot of "Disk Management" & "Disk Drives" under "Device Manager". ORICO customer care center will be here to help.

ORICO Customer Care Center

Website: <http://www.oricoonline.us/download.aspx>

ORICO customer care team: supports@orico.com.cn

Tel: 86-755-25196059

4.2 Declaration

ORICO Technologies Co., Ltd., all rights reserved.

Thank you so much for purchase ORICO product. Please refer to this manual when using orico product or experienced issues. Additionally, please kindly contact ORICO customer care team if any concern.

ORICO® is registered trademark of ORICO Technologies Co., Ltd.. Any other product, trademark, service or company mentioned herein is trademark or registered trademark of the respective owners.

This manual is for reference only and it's not a guarantee.

ORICO Technologies Co., Ltd. reserve all rights of maintenance to this manual and shall not liable for any lost or damage resulting from this manual. Please kindly contact orico customer care team when any concern.

ORICO Technologies Co., Ltd shall not liable for compensation and maintenance of the following conditions.

1. Any special, incidental, indirect and secondary lost or damage.
2. Profit and revenue lost or damage.

3. Files, data, drive and device lost or damage.

Note: Compensation for lost or damage resulting from This manual or orico product shall not exceed the payment of your purchase to this product.

FCC

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.





www.orico.cc

ORICO Technologies Co.,Ltd.

Hotline: 400-6696298

Tel: 86-755-25196059

Website: www.orico.cc

E-mail: supports@orico.com.cn

Company Add: 19/F, Block 14A, Zhonghaixin Science & Technology Park, Longgang District, Shenzhen, China

Factory Add: Room 201, Building 11, No. 24, Tangjiao Road, Changping Town, Dongguan City, Guangdong, China
